

# GFB Deceptor Pro II

## Kia Stinger Twin Valve Kit Part #T9512

**WARNING:** If you are not experienced in automotive wiring, GFB recommends that this installation is carried out by a professional. Irreversible damage could occur if wired incorrectly, which is not covered by warranty.

Do not manually rotate the internal sleeve on the valve, always apply power and use the controller to change the venting bias. DO NOT put fingers or foreign objects into the valve's ports. Doing so may result in personal injury or damage to the blow-off valve.

+61 2 9534 0099

sales@gfb.com.au

www.gfb.com.au

facebook.com/GFBturbo


### INSTALLING THE CONTROL BOX

Connect the red wire to a +12V power supply inside the cabin using a 5A fuse (fuse not supplied). Ensure this power supply is ignition switched and not permanently powered. Now connect the black wire to ground, most commonly this is a bolt on the chassis.

Find a suitable mounting location for the control box. Ensure both mating surfaces are clean and dry, then secure the control box using the supplied double-sided tape. Press hard and hold for 30 seconds.

At this point it is recommended you test the wiring before continuing the installation. Connect the control box and valves to the wiring loom as shown below. NOTE: it doesn't matter which cable each valve is connected to, the operation is the same regardless.


Now turn the ignition on. Please read the **Adjusting the Sound** section, then confirm correct operation of the control box and valve before proceeding with the rest of the installation.

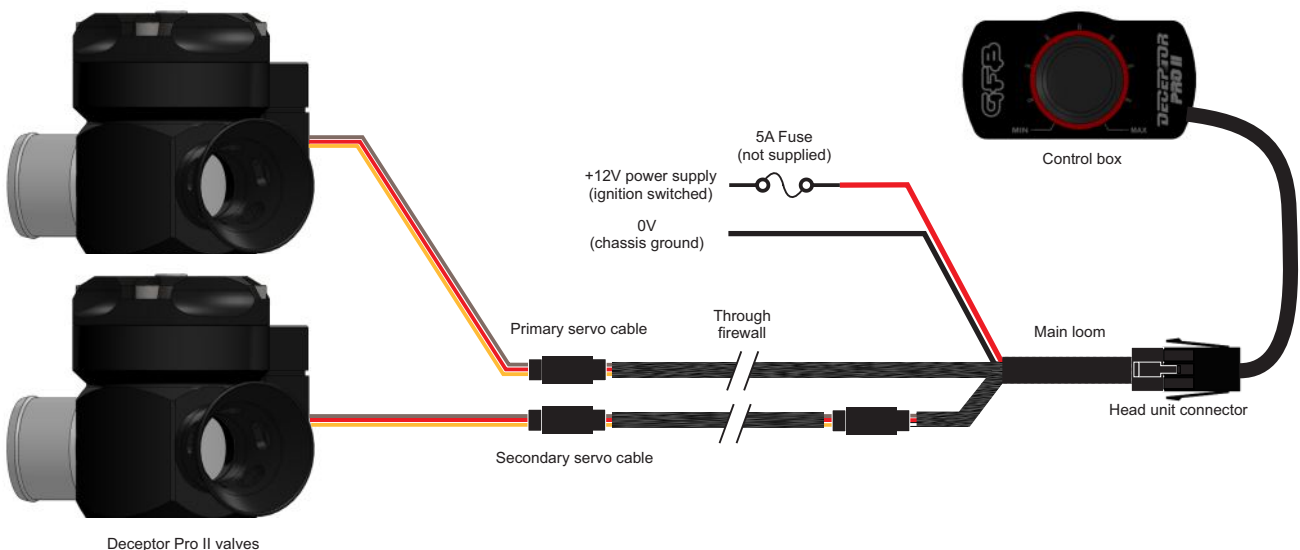

Continue the installation by feeding the two servo cables through the firewall into the engine bay. Ensure the cables are protected where they pass through the firewall to prevent abrasion and damage.

## INSTALLING THE BLOW OFF VALVES

- 1) Begin by removing the two factory diverter valves. It is easiest to start by removing the large recirc hoses from the valves first, as they are quite tight and it helps if the valves are still solidly mounted. Then use a 10mm socket to remove the 8 screws, remove the two vacuum hoses, then take the valves out.
- 2) Position the valves in the factory location and screw the inserted screws in by hand as much as possible. Then use the supplied shortened hex key to fully tighten ( → ), followed by the remaining screws.
- 3) Fit the two recirc hoses onto the outlets of both valves, and replace the clamps.
- 4) Remove the long factory vacuum hose from the solenoid, and flip it around so the long hose now connects to the right hand valve, and the medium hose now goes to the solenoid. The shortest hose goes to the left hand valve. The installation below does not show the hose spring clips on the valves to neaten the installation. The barbs are a tight fit, and the hoses will not pop off if you choose to do the same.
- 5) Connect the two servo cables to the Deceptor Pro valves and secure the loom along its entire length to ensure it doesn't rub, catch moving parts, or touch hot parts in the engine bay.

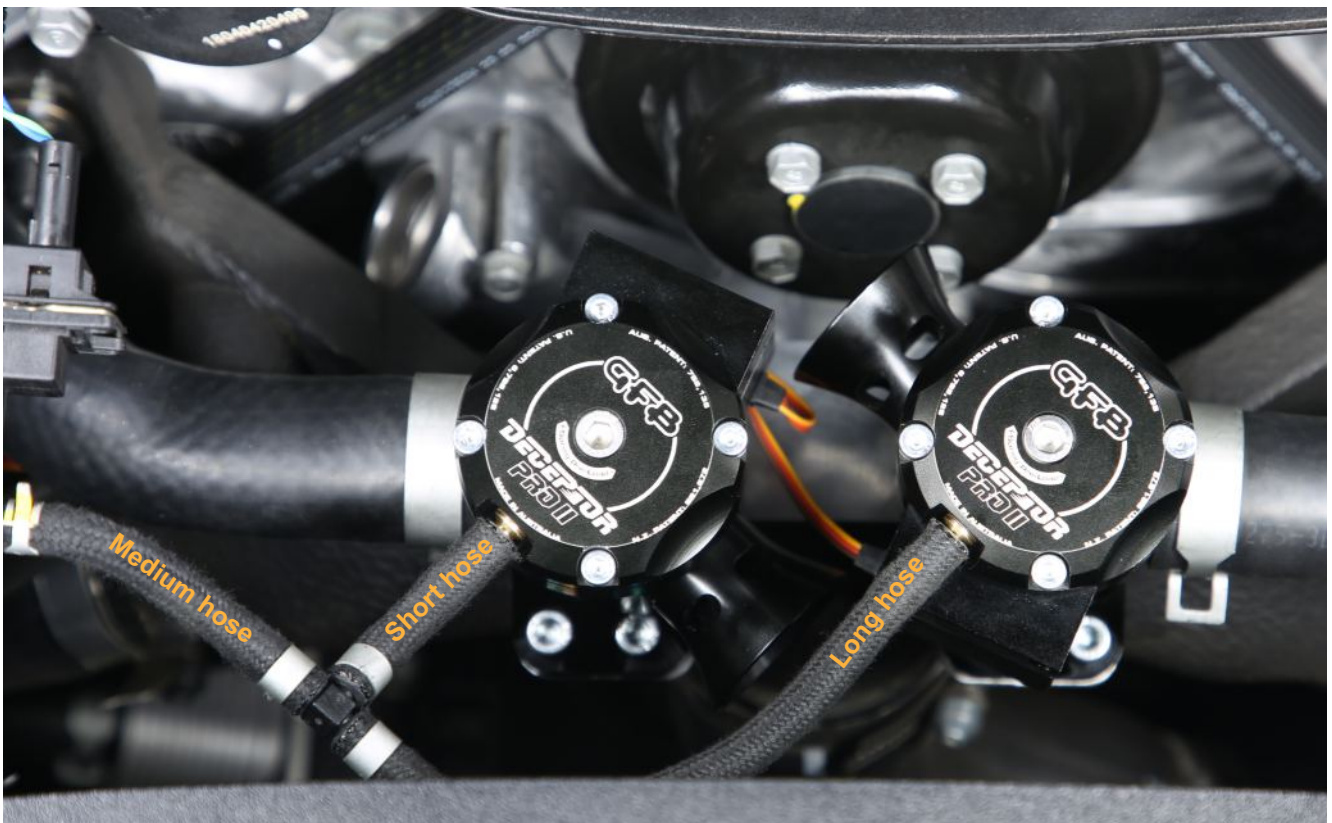

## ADJUSTING THE SPRING PRE-LOAD

The spring pre-load **DOES NOT** need to be adjusted to suit different boost pressure. **All GFB valves will stay shut** under full throttle conditions **regardless** of boost pressure or spring pre-load.


Because the Stinger uses an ECU-controlled solenoid valve to switch the top port of the BOVs from boost to vacuum when it requires them to open, the conditions under which the BOVs vent are largely determined by the ECU. However, the duration of the sound and how easily they blow off is controlled by the spring pre-load.

The ECU typically triggers the solenoid immediately on throttle lift off (even if the throttle is only slightly lifted), but usually only above a certain RPM and load. Therefore, the valves may appear to vent at odd times, or at low load it may appear not to vent at all, this is normal and is determined by the ECU.

Since there is no MAF sensor on the Stinger, the ECU is completely unaffected by atmosphere venting or spring pre-load, and therefore the spring pre-load can simply be set to your preference to control how easily the valve blows off when you lift off the throttle.

The screw in the centre of the Deceptor Pro II cap is the spring adjuster, which requires the supplied 5mm hex key for adjustments. The softest spring setting is achieved when the top of the adjustment screw is 3mm above the head of the valve as shown opposite. Do not set the screw more than 3mm above the head.

Start by setting the venting bias adjustment to full atmosphere (so you can hear the valves venting during setup), then set the spring pre-load screws level with the top of the valves.

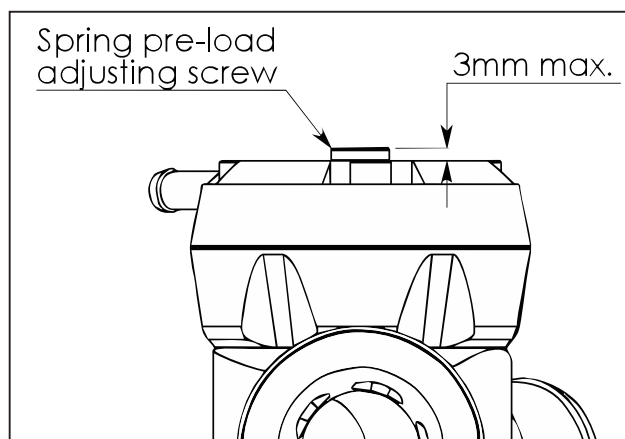

Take the car for a drive, and take note of how easily the valves vent when you lift off. Making the springs softer will allow the valves to open easier and vent longer, and increasing the pre-load means you will need to drive the car harder (i.e. more boost) before you start to hear the BOVs venting, and the blow-off sound will be shorter in duration.

## ADJUSTING THE SOUND - CONTINUED

The control box dial controls the patented venting bias adjustment system of the Deceptor Pro II BOVs. Turning the dial fully anti-clockwise sets the valves to 100% recirc for silent operation, full clockwise results in 100% atmosphere venting for maximum sound, and any ratio is possible between these limits.

The control box features a “sleep” mode that dims the dial lighting after approximately 10 seconds. This reduces power consumption and also prevents accidental adjustment of the valve position.



**Push to activate, turn to adjust**

To make position adjustments, wake the unit up by pressing the dial briefly (lighting will brighten), at which point the valves will respond to dial position adjustments. The unit will return to sleep mode after 10 seconds.

## ADJUSTING THE SOUND - CONTINUED

The control box also has a range limiting feature. This can be used to limit the maximum atmosphere-venting bias position of the Deceptor Pro valves. To use this feature, set the dial to the position that you want as your new maximum, then press and hold the dial until the light flashes. Now when you move the dial to the maximum position, the valves will only open as far as the position which you have just set as your new limit.

To reset the range to maximum again, turn the dial fully clockwise, then press and hold the dial.

Do not be afraid to experiment with the spring and sound settings, as the Stinger's air/fuel ratio cannot be affected, nor is it possible to damage the engine or turbos with BOV adjustments.

You can also purchase whistling trumpets to change the venting sound. Part # 5702 is a single whistling trumpet, which you can use on either BOV, or buy two to put on both valves. It changes the venting sound to a high-pitch whistle.



## TECH SUPPORT

Just installed your shiny new DV+ and something doesn't seem right? Do you have a question about the product? Have you heard conflicting information and need some clarity?

We want you to get the best advice, first time. No-one has as much experience with these products as our own engineers, so make us your first point of contact!

Head to [www.gfb.com.au/contact-us](http://www.gfb.com.au/contact-us) to get in touch, or use the QR code:



## WARRANTY

**WARNING:** GFB recommends that only qualified motor engineers fit this product. GFB products are engineered for best performance, however incorrect use or modification may cause damage to or reduce the longevity of the engine/drive-train components.

**GFB LIFETIME WARRANTY:** Our commitment to quality means that when we put our name to something, we are also staking our reputation on it. That's why we back our products with the best warranty in the business!

You should expect a lifetime of use from a well-engineered product, so if your GFB product fails as a result of defective materials or faulty workmanship whilst you remain the original owner, we will repair or replace it (limited only to the repair or replacement of GFB products provided they are used as intended and in accordance with all appropriate warnings and limitations. No other warranty is expressed or implied).

If a fault occurs as a result of usage outside of the terms of the warranty, or you are not the original owner fear not, we can still help you. You should never need to throw a GFB product away, as spare parts are available and won't cost the earth.